5.5” x 4” Graphics Tablet

Model: CyberTablet Z7

QuickGuide

For Windows™ Users

www.adesso.com

LIMITED WARRANTY

ADESSO provides one year limited warranty for the quality of all its products in materials and workmanship.

During this period, ADESSO will repair or replace all merchandise, which proved to be defective. However, ADESSO will not warranty any product which has been subjected to improper freight Handling, shipping abuse, neglect or unauthorized repair or installation. The warranty also will not cover products installed with Non-ADESSO components and product with broken sealed and assembly trace. After replacement of RMA, ADESSO reserves the right to request the total cost of the replacement products with broken seals or assembly trace.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with transportation charges pre-paid to Adesso. You must contact Adesso at support@adesso.com for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (no P.O. Box), telephone number, copy of the bill of sale as proof of purchase and have the package clearly marked with your RMA number.

SUPPORT

We have listed most of our FAQ’s (Frequently Asked Questions) at: http://www.adesso.com/faqs.asp. Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.

Email Support: If our FAQ’s do not help you resolve your issues, please email support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

INTRODUCTION

The CyberTablet Z7 is a great choice for graphic and digital artists, architects, engineers, web designers and hobbyists who love to draw and paint on the computer. It is also perfect for the home and school. Students and business professionals who want to take digital notes or edit photos will love the tablet’s ease of use and sophistication. The CyberTablet Z7 features 2540 lines per inch hardware resolution and 1024 levels of pen pressure sensitivity to accomplish the most complex paintings and drawings or computer-aided design tasks. Using the CyberTablet Z7 with Microsoft® Windows 7 or VistaTM, you can achieve a new tablet experience that includes note taking and handwriting recognition to get the results you want, quick and easy.

FEATURES

- 5.5” x 4” writing and drawing area.
- 100 RPS report rate for real time tablet response
- High accuracy and sensitivity for a highly reactive cursor
- No need for separate power adapted, it is a full USB powered graphics tablet.
- Includes 9 programmed hotkeys for faster links to application and commands
- Easy to use tablet software for Windows XP users
- Tablet Dimensions: 9.45” x 9.2” x 1”
- Tablet Drawing Area Dimension: 5.5” x 4”
- Tablet USB 2.0 cable length : 4.5”
- Pen Dimensions: 5.4 ” x 0.75”
- Includes: 1 AAA Battery for pen

REQUIREMENTS

- Hardware: IBM, Pentium II class compatible or higher
- Operating system: Windows 7, Vista, XP, 2000
  Macintosh System (Intel Mac) OS X 10.4.11/10.5.8/10.6
- Available USB Port
- Memory: 32 MB of RAM or higher
- DVD-ROM Drive

Hardware Installation

1. Connect the USB cable of the Tablet to the USB port and power ON your personal computer.

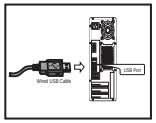

Driver and Software Installation

1. Insert the tablet Driver CD into your computer’s CD-ROM drive for driver and software installation. (If the software installer menu does not automatically run, please double click on the install icon and follow the prompts to connect your tablet hardware and install the driver software.)

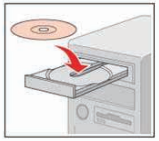

2.

a. Click the **Driver Setup** and follow the on screen procedure. After the driver is installed, click **OK** to reboot your computer.

b. For Windows XP and 2000 users, please also install the **Pen Suite** software for tablet functions such as annotation, mark-up and signature

c. Proceed in installing the **ArtRage 2.5** drawing and painting software.

Note:
After you connect the Tablet into the computer you will see a small Tablet icon ( ) appears in the system tray, which is normally at the lower right corner of the screen.

Changing the Pen Battery

Pull the upper barrel out of the pen and insert the battery.

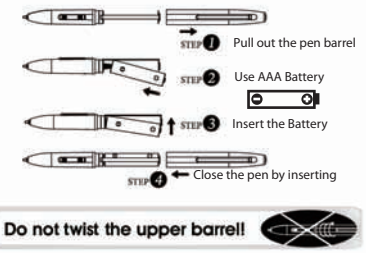
STEP 1 Pull out the pen barrel
STEP 2 Use AAA Battery
STEP 3 Insert the Battery
STEP 4 Close the pen by inserting
Caution
Do not twist the upper barrel!

Storing the Digital Pen properly

To store the Digital Pen, make sure that the tip does not touch anything, especially if the pen is in a cup holder with the tip down. Pressure applied to the pen tip will cause a constant drain on the pen’s battery. it is recommended to place the pen in a pen holder or store it with the pen tip pointing upward, or place it horizontally with the pen tip free of any other objects.

Changing the Wireless Stylus Pen Tip

1. Pull out the pen tip from Digital pen by using a Pen Clip

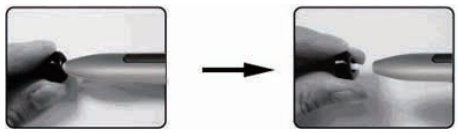

2. Push the pen tip into the digital pen

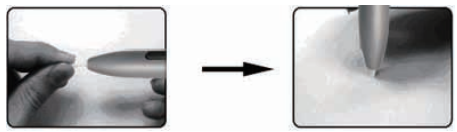

Description

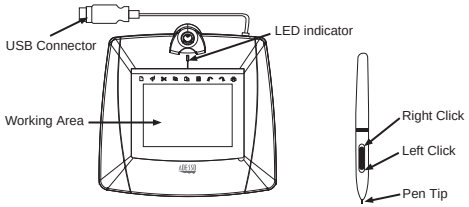

The green LED light on the tablet is the main indicator for hardware operation and depending on your pen tablet model, may be located at a different area that shown in the above diagram. This LED normally stays off, and will only turn it on or off in response to various conditions.

Frequently Asked Question

Question 1:**The tablet does not work. What can I do**?

Answer: Please follow these steps below:

1. Pull out the tablet’s USB plug from the computer.
2. Remove the Tablet Driver from the system.
3. Re-connect the Tablet’s USB to the computer.
   3.1 Check whether the tablet’s LED is blinking or not. If the LED is unlit, this means your tablet is faulty.
   3.2 Test your wireless digital pen on the tablet’s working area, if it can work as a mouse, the hardware is OK. If it doesn’t work, please change the battery.
   3.3 After you have changed the battery of the pen and it still not working, this means the hardware is faulty.
4. You can download the latest version of driver directly from our website.
5. After installing the new version of driver, the system will require you to restart your computer.
6. After restart your computer, on bottom right of the screen, you will see the tablet icon ( ).
   6.1 If you can’t find the tablet icon ( ) on the bottom right of the screen, it means the driver failed in startup, It might be caused by an incompatible hardware or software issue.
   6.2 Check from [My Computer] ► [Properties] ► [Hardware] ► [Device Manager], if there is an exclamation mark, it means that the installed driver of the tablet is incompatible with the Windows system. If you have this problem, please contact us for more information.
7. By clicking the tablet icon ( ) on the bottom right of the screen, you can test the pressure sensitivity to see whether the pen pressure function works or not. (Please read the e-user’s manual on the included CD for Pen tablet configuration details).

Note: If you do not have pen pressure, it means the pen might be faulty.

Please contact Adesso Tech Support.

5.5” x 4” Graphics Tablet

Model: CyberTablet Z7

QuickGuide

For Macintosh™ Users

www.adesso.com

LIMITED WARRANTY

ADESSO provides one year limited warranty for the quality of all its products in materials and workmanship.

During this period, ADESSO will repair or replace all merchandise, which proved to be defective. However, ADESSO will not warranty any product which has been subjected to improper freight Handling, shipping abuse, neglect or unauthorized repair or installation. The warranty also will not cover products installed with Non-ADESSO components and product with broken sealed and assembly trace. After replacement of RMA, ADESSO reserves the right to request the total cost of the replacement products with broken seals or assembly trace.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with transportation charges pre-paid to Adesso. You must contact Adesso at support@adesso.com for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (no P.O. Box), telephone number, copy of the bill of sale as proof of purchase and have the package clearly marked with your RMA number.

SUPPORT

We have listed most of our FAQ’s (Frequently Asked Questions) at: http://www.adesso.com/faqs.asp. Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.

Email Support: If our FAQ’s do not help you resolve your issues, please email support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

INTRODUCTION

The CyberTablet Z7 is a great choice for graphic and digital artists, architects, engineers, web designers and hobbyists who love to draw and paint on the computer. It is also perfect for the home and school. Students and business professionals who want to take digital notes or edit photos will love the tablet’s ease of use and sophistication. The CyberTablet Z7 features 2540 lines per inch hardware resolution and 1024 levels of pen pressure sensitivity to accomplish the most complex paintings and drawings or computer-aided design tasks. Using the CyberTablet Z7 with Microsoft® Windows 7 or VistaTM, you can achieve a new tablet experience that includes note taking and handwriting recognition to get the results you want, quick and easy.

FEATURES

- 5.5” x 4” writing and drawing area.
- 100 RPS report rate for real time tablet response
- High accuracy and sensitivity for a highly reactive cursor
- No need for separate power adapted, it is a full USB powered graphics tablet.
- Includes 9 programmed hotkeys for faster links to application and commands
- Easy to use tablet software for Windows XP users
- Tablet Dimensions: 9.45” x 9.2” x 1”
- Tablet Drawing Area Dimension: 5.5” x 4”
- Tablet USB 2.0 cable length : 4.5”
- Pen Dimensions: 5.4 ” x 0.75”
- Includes: 1 AAA Battery for pen

REQUIREMENTS

- Hardware: IBM, Pentium II class compatible or higher
- Operating system: Windows 7, Vista, XP, 2000
  Macintosh System (Intel Mac) OS X 10.4.11/10.5.8/10.6
- Available USB Port
- Memory: 32 MB of RAM or higher
- DVD-ROM Drive

Hardware Installation

1. Connect the USB cable of the Tablet to the USB port and power ON your personal computer.

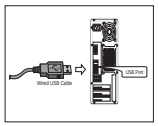

Driver and Software Installation

1. Insert the tablet Driver CD into your computer’s CD-ROM drive for driver and software installation.

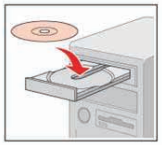

2.

a. Open Mac Folder and click the **Driver Setup** and follow the on screen procedure.

b. Proceed in installing the **ArtRage 2.5** drawing and painting software.

Note:
After you connect the Tablet into the computer you will find the **PenTablet Settings** in your application folder to configure Pen Tablet functions

Changing the Pen Battery

Pull the upper barrel out of the pen and insert the battery.

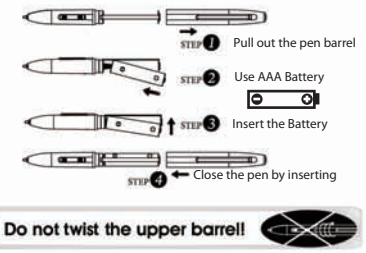
STEP 1 Pull out the pen barrel
STEP 2 Use AAA Battery
STEP 3 Insert the Battery
STEP 4 Close the pen by inserting
Caution
Do not twist the upper barrel!

Storing the Digital Pen properly

To store the Digital Pen, make sure that the tip does not touch anything, especially if the pen is in a cup holder with the tip down. Pressure applied to the pen tip will cause a constant drain on the pen’s battery. it is recommended to place the pen in a pen holder or store it with the pen tip pointing upward, or place it horizontally with the pen tip free of any other objects.

Changing the Wireless Stylus Pen Tip

1. Pull out the pen tip from Digital pen by using a Pen Clip

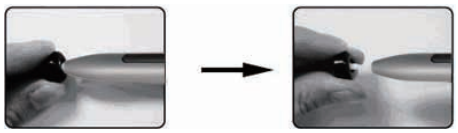

2. Push the pen tip into the digital pen

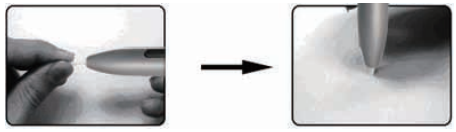

Description

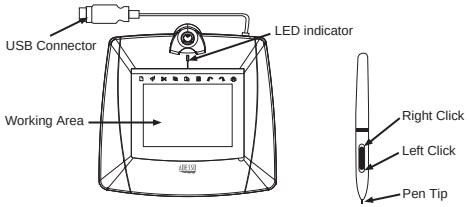

The green LED light on the tablet is the main indicator for hardware operation and depending on your pen tablet model, may be located at a different area that shown in the above diagram. This LED normally stays off, and will only turn it on or off in response to various conditions.

Frequently Asked Question

(1) The LED light does not display at all?
For a digital pen, lightly tap the pen tip on any surface and try it again. For the tablet mouse, press the left button. If the light still does not come on, check the battery in the pen or the tablet mouse. If the battery is OK, seek help from your retailer.

(2) The LED on tablet is blinking
It may be caused by unstable USB cable. Please plug out and in your USB or change to another USB port.

(3) The cursor does not move while moving the digital pen on the tablet after installation?
Please verify if your hardware set up properly. Also, you can download the latest driver from our website at www.adesso.com. Then install the drive again. Please uninstall your old driver completely before installing the new driver.

(4) When you press on the pen tip and the line does not become thicker does it means there is no pressure sensitivity?
Test the pen’s pressure sensitivity as described, if it still not working it may be caused improper installation of the driver. Please reinstall your driver as instructed on this quick guide.

(5) The cursor moves erratically or jitters when the pen is held still?
Keep the tablet at least 5-inch(12mm) away from a monitor, modem, and other electronic devices, because certain devices may emit the electromagnetic interference.

(6) How can I get updated software?
You can download the latest driver from our website.